

75/90 FourStroke EFI Wiring Diagram

- | | |
|--|---|
| 1 - Electronic control module (ECM) | 20 - 20 ampere fuse - battery charging circuit |
| 2 - Engine water temperature sensor | 21 - 20 ampere fuse - main relay and fuel pump relay |
| 3 - Ignition coil for cylinder #1 and cylinder #4 | 22 - Voltage regulator/rectifier |
| 4 - Ignition coil for cylinder #2 and cylinder #3 | 23 - Stator - 25 ampere |
| 5 - Fuel injector #1 | 24 - Trim indicator |
| 6 - Fuel injector #2 | 25 - Instruments |
| 7 - Fuel injector #3 | 26 - Crank position sensors |
| 8 - Fuel injector #4 | 27 - Malfunction indicator lamp (MIL) connection |
| 9 - Data test port | 28 - Negative battery cable |
| 10 - Main relay and fuel pump relay | 29 - Voltage regulator |
| 11 - Electric fuel pump | 30 - Starter motor |
| 12 - Splice saver | 31 - Starter solenoid |
| 13 - Throttle position sensor | 32 - Power trim relay |
| 14 - Manifold air pressure/temperature sensor (MAP-T) | 33 - Cowl mounted trim switch |
| 15 - Idle air control (IAC) | 34 - Remote control harness connector |
| 16 - Oil pressure sensor | 35 - Adaptor harness (model 2005) |
| 17 - Shift switch | 36 - Adaptor harness (model 2006) |
| 18 - 30 ampere fuse - electric starter circuit | 37 - Engine harness connector |
| 19 - 20 ampere fuse - power trim circuit | 38 - Diode |